

This is the KP Adjustable Nose Button "Clocking" table

It gives the "clocking" minutes for both the inner and outer eccentric nuts, all "clock" minutes are as viewed from the pilots seat at the assembled button's back
 Note The "inner" nut is the SMALLER nut that is "inside" the outer nut. The "outer" nut is the LARGER nut that is "outside" the inner nut..

Values given in table are angles represented as minutes on a clock face, Values for Inner and Outer may be swapped over and the same setting will result.

		Right Thrust Angle (Degrees)																
		0	0.5	1	1.5	2	2.5	3	3.5	4	4.5	5	5.5	6	6.5	7	7.5	8
Down Thrust Angle (Degrees)	0 Inner	15	59	59	58	58	57	56	56	55	54	54	53	52	51	50	49	47
	Outer	45	31	31	32	32	33	34	34	35	36	36	37	38	39	40	41	43
	0.5 Inner	14	7	3	1	60	59	58	57	56	55	54	53	52	51	50	49	48
	Outer	46	38	36	35	35	35	35	36	36	37	37	38	39	40	40	42	44
	1 Inner	14	9	6	3	2	0	59	58	57	56	55	55	54	53	51	50	48
	Outer	46	42	39	38	37	37	37	37	37	38	38	39	40	40	41	42	44
	1.5 Inner	13	10	7	5	3	2	0	59	58	57	56	55	54	53	52	50	48
	Outer	47	44	42	40	39	39	38	38	39	39	39	40	41	41	42	43	46
	2 Inner	13	10	8	6	4	3	1	0	59	58	57	56	55	54	52	51	
	Outer	47	45	43	42	41	40	40	40	40	40	40	41	41	42	43	44	
	2.5 Inner	12	10	8	6	5	3	2	1	59	58	57	56	55	54	52	51	
	Outer	48	46	45	43	42	42	41	41	41	41	42	42	43	43	44	45	
	3 Inner	11	10	8	7	5	4	2	1	60	59	58	56	55	54	53	50	
	Outer	49	47	46	45	44	43	43	42	42	43	43	43	44	44	45	47	
	3.5 Inner	11	9	8	7	5	4	3	1	0	59	58	57	55	54	52		
	Outer	49	48	47	46	45	44	44	44	44	44	44	44	45	45	47		
	4 Inner	10	9	8	6	5	4	3	1	0	59	58	57	55	54	52		
	Outer	50	49	48	47	46	46	45	45	45	45	45	45	46	47	48		
	4.5 Inner	9	8	7	6	5	4	2	1	0	59	58	57	55	53			
	Outer	51	50	49	48	47	47	46	46	46	46	46	47	47	48			
5 Inner	9	8	7	6	5	3	2	1	60	59	58	56	55					
Outer	51	50	50	49	48	48	47	47	47	47	47	48	49					
5.5 Inner	8	7	6	5	4	3	2	1	60	58	57	56	53					
Outer	52	51	50	50	49	49	49	48	48	48	49	49	51					
6 Inner	7	6	5	4	4	2	1	0	59	58	56	54						
Outer	53	52	51	51	50	50	50	50	50	50	50	52						
6.5 Inner	6	5	5	4	3	2	1	60	58	57								
Outer	54	53	52	52	51	51	51	51	51	52								
7 Inner	5	5	4	3	2	1	60	58	57									
Outer	55	54	54	53	53	53	52	53	53									
7.5 Inner	4	3	3	2	1	60	58											
Outer	56	55	55	55	54	54	55											
8 Inner	2	1	1	59														
Outer	58	57	57	57														

This table is set up for a "clockings" for combinations of down and right thrust

If your model requires left thrust, you will have to work out the oppisite settings as a mirror image to that given

(so 45 would become 15, 50 would be 10, 55 is 4, etc)

Thanks to Clive Gamble for this table and the methodology presented herin!

KP Adjustable Nose Buttons are available from RockyTop Models
 (www.rockytopmodels.com)